

|   |   |   |   |  |   |   |   |
|---|---|---|---|--|---|---|---|
| Image   |  |  |  |  |  |                          |  |
| Spec  |   |   |   |  |   |   |   |
| Model   | SF500   | SF600   | SF510   | SF610  | SF601-EM  | SF601-HID   | SF620   |
| UID Read Only                                     | Mifare 1K/4K 、Ultralight 、DESFire   |   |   |  | EM 125KHz   | HID Proximity 125KHz<br> | Mifare 1K/4K<br>Ultralight<br>DESFire   |
| Sector Read/Write                                 | Mifare 1K/4K  |   |   |  |   |   | Mifare 1K/4K  |
| Mifare Application Directory                      | MAD1<br>MAD2  |   |   |  |   |   | MAD1/MAD2   |
| Interface   | ABA-TK2<br>Wiegand 、RS232   |   | ABA-TK2 、Wiegand 、RS232 、RS485  |  |   |   |   |
| Output  | Sector / UID  |   |   |  | UID Only  |   |   |
| Fingerprint Only Capacity (for 1:N)               | 10  | 1900  | 10  | 1900   |   |   |   |
| Card + Fingerprint (for 1:1)                      | Support & Unlimited   |   |   |  |   |   |   |
| Card Only Capacity (for Fingerprint Invalid User) | Unlimited (for SK)<br>100 (for Offline)   |   |   |  | 100   |   |   |
| Host (or Remote) Enroll / Delete (for Start Kit)  | RS232<br>Enroll Card  |   | RS232<br>RS485<br>Enroll Card   |  | RS232<br>RS485  |   |   |
| Offline Enroll / Delete (with User's Card)        | Manager Enroll Card<br>Manager Delete Card  |   | Manager Enroll Card (Changeable)<br>Manager Delete Card (Changeable)              |  |   |   |   |
| Offline Issue Card + Fingerprint                  | Support & Unlimited   |   |   |  |   |   |   |
| Configure Method                                  | RS232 (with MF700KIT)<br>Configured Card  |   |   |  | RS232 (with MF700KIT)   |   |   |
| Door Control (DO)                                 |   |   | Relay, MAX 5A   |  |   |   |   |
| Supply Voltage (DC)                               | 7.5V~12V  |   | 5V or 7.5V~12V  |  |   |   |   |

\*\* Specification is subjected to change without notice. \*\*