

User Manual

Portable thermal printer

s'print



All rights reserved. Total or partial reproduction of this manual in whatever form, whether by printed or electronic means, is forbidden. While guaranteeing that the information contained in it has been carefully checked, CUSTOM ENGINEERING SPA and other entities utilized in the realization of this manual bear no responsibility for how the manual is used.

Information regarding any errors found in it or suggestions on how it could be improved are appreciated. Since products are subject to continuous check and improvement, CUSTOM ENGINEERING SPA reserves the right to make changes in information contained in this manual without prior notification.

COD. DOME - DPT100-S

VERS. 1.20

Copyright © 2001 CUSTOM ENGINEERING SPA – Italy

CUSTOM ENGINEERING SPA

Str. Berettine 2 - 43010 Fontevivo (PARMA) - Italy

Phone: +39 0521-680111 - Fax: +39 0521-610701

<http://www.custom.it> <http://www.smice.com>

Customer Service Dept.:


Phone: +39 0521-680163 - Fax: +39 0521-680146

E-mail: support@custom.it

PRINTER COMPONENTS


A. DPT100-S – Front external view

- 1- Printer base
- 2- Cover
- 3- Paper holder
- 4- Printing mechanism
- 5- Multi-function + ON key
- 6- Paper exit slot
- 7- Status Led

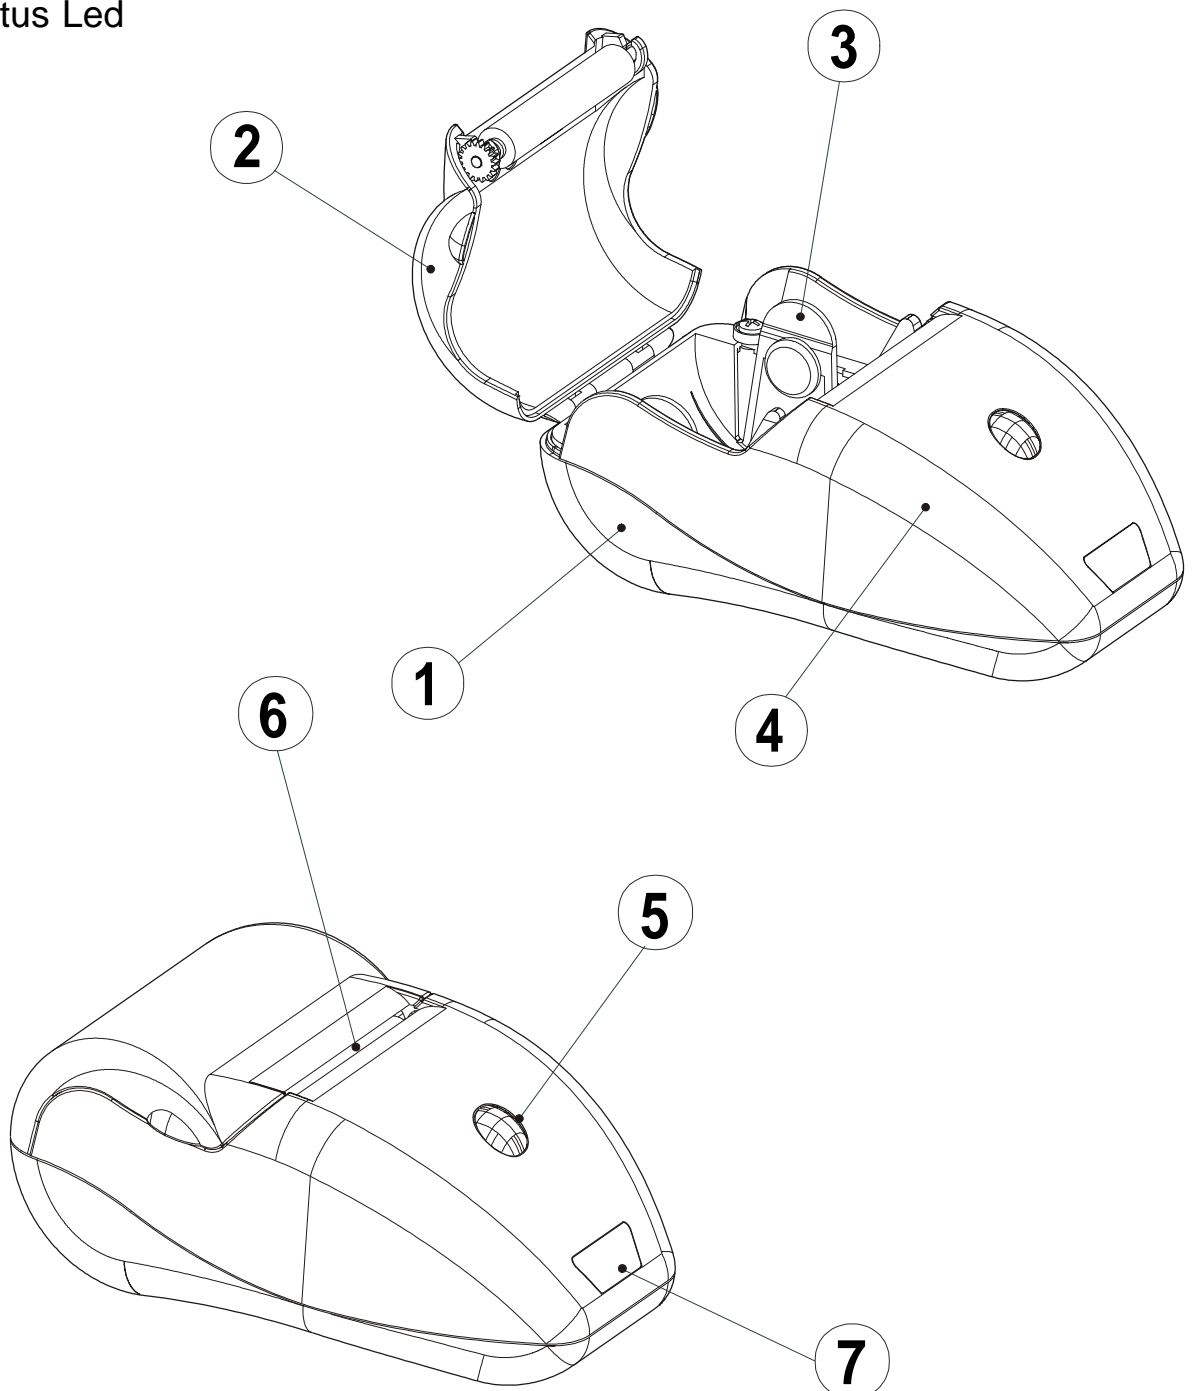

B. DPT100-S – Under view

1- Serial connector and power supply

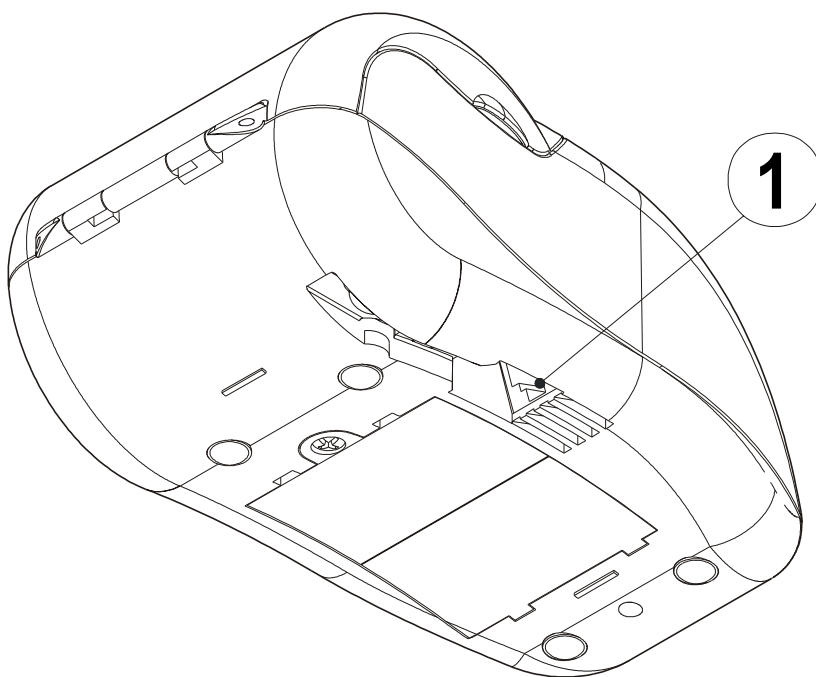

INTRODUCTION

| | |
|---|---|
| MANUAL CONTENTS | 1 |
| EXPLANATORY NOTES USED IN THIS MANUAL | 1 |
| GENERAL SAFETY INFORMATION | 1 |
| UNPACKING THE PRINTER | 2 |
| PRINTER FEATURES | 3 |
| PRINTER DESCRIPTION | 4 |

1. INSTALLATION AND USE

| | |
|--|-----|
| 1.1 CONNECTIONS | 1-1 |
| 1.1.1 Power supply | 1-1 |
| 1.1.2 Turning the printer On and Off | 1-2 |
| 1.1.3 Connection with adapter | 1-2 |
| 1.2 CONFIGURATION | 1-3 |
| 1.2.1 Printing optimization using the power supply | 1-4 |
| 1.3 HEXADECIMAL DUMP | 1-5 |
| 1.4 SIXLOAD | 1-5 |
| 1.5 MAINTENANCE | 1-6 |
| 1.5.1 Changing the paper roll | 1-6 |
| 1.5.2 Cleaning | 1-8 |

2. INTERFACES

| | |
|------------------------|-----|
| 2.1 RS232 SERIAL | 2-1 |
|------------------------|-----|

3. PRINTER OPERATION

| | |
|-------------------------------|-----|
| 3.1 CONTROL CHARACTERS | 3-1 |
| 3.1.1 ESC/POS emulation | 3-1 |

4. TECHNICAL SPECIFICATIONS

| | |
|------------------------------------|-----|
| 4.1 TECHNICAL SPECIFICATIONS | 4-1 |
| 4.2 ADAPTOR SPECIFICATIONS | 4-3 |
| 4.3 DIMENSIONS | 4-4 |

5. CHARACTER FONTS

5.1 CHARACTER SETS 5-1

APPENDIX A - ACCESSORIES AND SPARE PARTS

A.1 TICKET ALIGNMENT A-1

 A.1.1 Ticket alignment A-1

 A.1.2 Alignment Description A-1

A2 SPARE PARTS A-3

MANUAL ORGANIZATION

In addition to the Introduction which includes a description of the explanatory notes used in the manual, general safety information, how to unpack the printer and a brief description of the printer including its basic features, this manual is organized as follows:

Chapter 1: Contains the information required for correct printer installation and its proper use, as well as interface specifications

Chapter 2: Contains information on interface specifications

Chapter 3: Contains a description of the printer command set

Chapter 4: Contains Technical Specifications of the printer

Chapter 5: Contains the character sets (fonts) used by the printer

SYMBOL USED IN THIS MANUAL

NOTE



Gives important information or suggestions relative to the use of the printer.

WARNING



Information marked with this symbol must be carefully followed to guard against damaging the printer.

DANGER



Information marked with this symbol must be carefully followed to guard against operator injury or damage.

GENERAL SAFETY INFORMATION

- Read and keep the instructions which follow.
- Before cleaning the printer, disconnect the power supply and make sure that the printer is off.
- Clean the printer with a damp cloth. Do not use liquid or spray products.
- Do not operate the printer near water.
- Only use approved accessories and batteries. Do not connect to products that are not compatible.


- Use the type of electrical power supply indicated on the printer label. If in doubt, contact your retailer.
- When deciding where to place the printer, make sure it is positioned where its cables will not be damaged.
- Do not introduce foreign objects of any kind into the printer as they could cause a short circuit and could jeopardize printer functioning.
- Do not spill liquids onto the printer.
- Do not carry out technical operations on the printer, with the exception of the scheduled maintenance procedures specifically indicated in the user manual.
- Disconnect the printer from the electricity supply and have it repaired by a specialized technician when:
 - A. The feed connector has been damaged.
 - B. Liquid has seeped inside of the printer.
 - C. The printer has been exposed to rain or water.
 - D. The printer is not functioning normally despite the fact that all instructions in the users manual have been followed.
 - E. The printer has been dropped and its outer casing damaged.
 - F. Printer performance is poor.
 - G. The printer is not functioning.

UNPACKING THE PRINTER

Remove the printer from its carton being careful not to damage the packing material so that it may be re-used if the printer is to be transported in the future.

Make sure that all the components illustrated in fig. 1 are present and that there are no signs of damage. If there are, contact Customer Service.

1. Warning sheet
2. Cable
3. Paper roll
4. Adaptor
5. Printer
6. Box

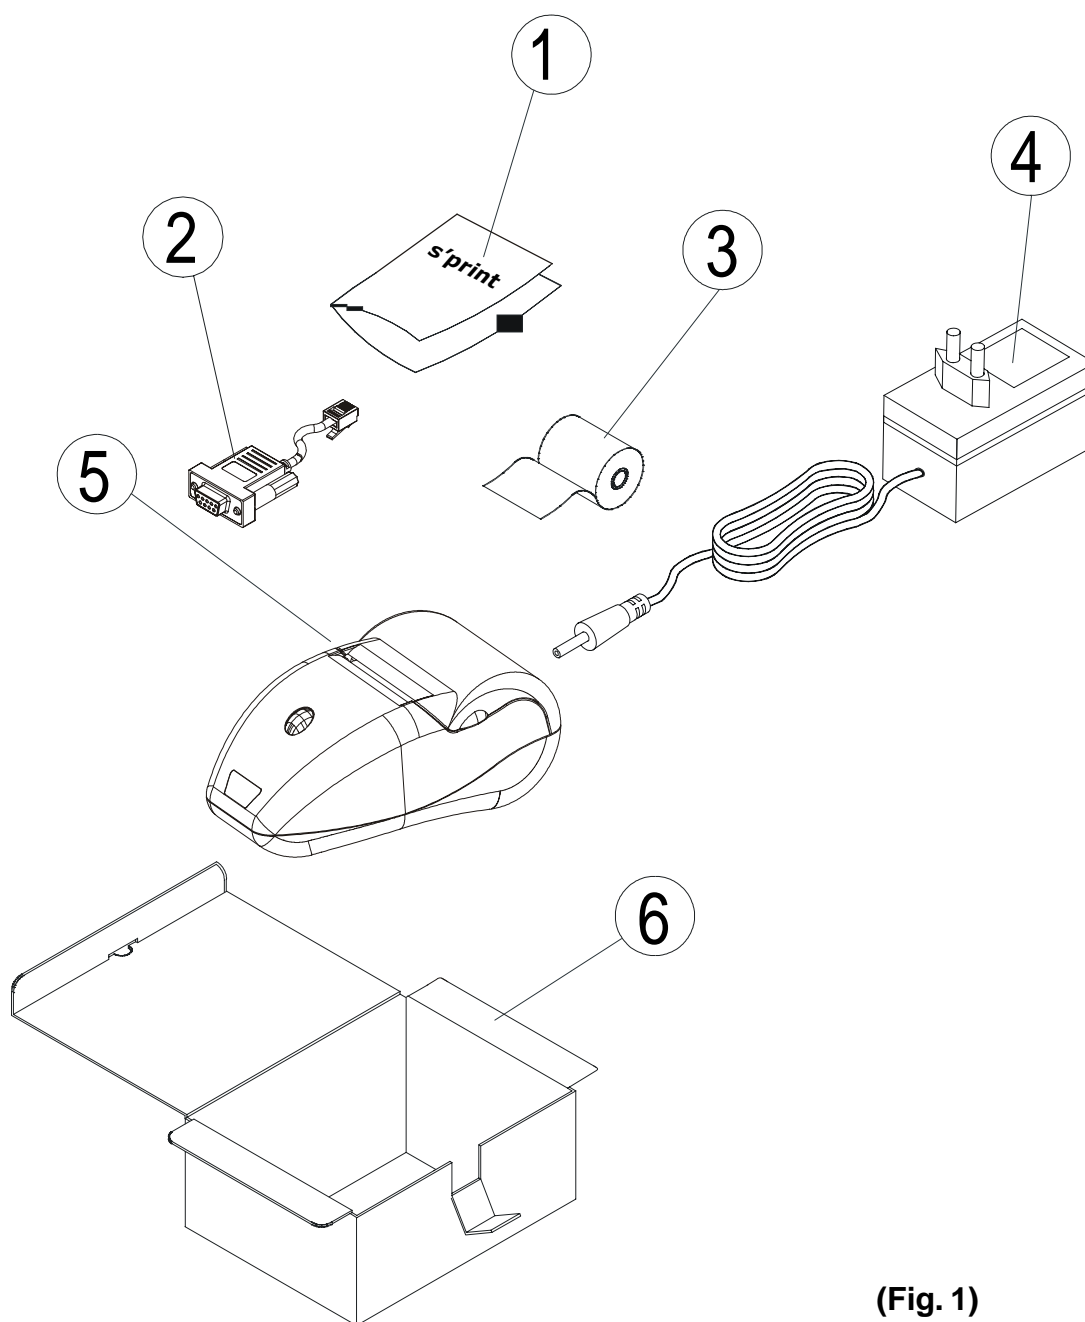

(Fig. 1)

PRINTER FEATURES

The new **s' print** portable thermal printer offers an innovative alternative to impact-based systems, with a range of interface options (RS232 serial, RS232+IRDA). The printer may be powered using an external adapter.

The **desktop version** (with RS232 interface) without battery is intended for the instrumentation, retail and general cash register sectors (for example, terminals for credit card payment).

It is important to note that **s' print** is the first Custom printer designed with

“sixload” easy paper load, making it simpler and more convenient to use.

It has a 203 dpi thermal print mechanism that utilizes 57.5mm-wide paper rolls and can print up to 24 or 40⁽¹⁾ characters per line.


⁽¹⁾NOTE



The 40 column version is downloadable on the Support/Download/Firmware section from www.custom.it web site.

PRINTER DESCRIPTION

The printers consists of a ABS-V0 casing (1) equipped with a cover (2) under which is housed the paper roll and print mechanism. On the front is the multi-function key (3) and red LED (4).

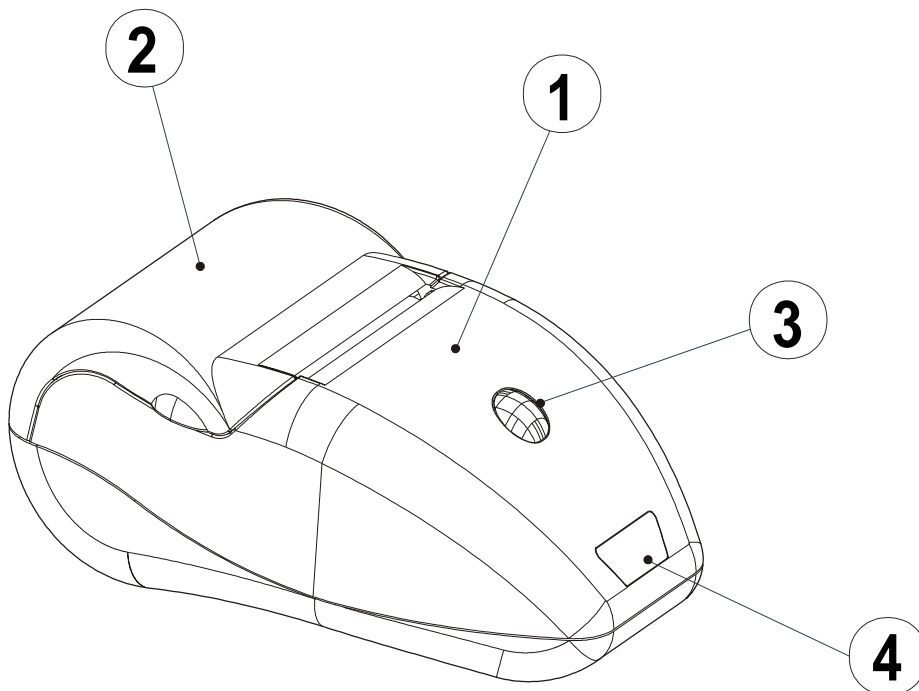


(Fig. 2)

- Multi-function key. This key is used to access a variety of printer options depending on how long it is held down. If the printer is off (red LED off), when this key is pressed power is turned on (blinking red LED). To turn the printer off the key is pressed two times (the LED begins to blink faster) and if it is not pressed again within three seconds the printer shuts off, otherwise it returns to operating status.
During the power-up phase, if the key is held down for at least three seconds, the printer enters the configuration mode and prints out a printer setup report. When the print-out is complete, the printer remains in stand-by to receive characters from the serial interface that are printed out in hexadecimal code.
If the key is pressed, the printer by-passes the setup mode and terminates the hexadecimal dump function. Pressing the key quickly will exit the configuration mode, while if it is held down for at least a second, it is possible to make changes in the individual parameters.
- The red LED displays printer operating status and this check is performed “on-line”. Table 1 lists operating statuses and the LED signals connected to them:

(Tab.1)

| LED status | Description |
|--|---|
| Always off | Printer off |
| Very slow blinking (one blink every three seconds) | Printer On - no fault |
| Slow blinking (one blink every second) | Paper Out message |
| Fast blinking (one blink every half second) | Resettable error (head overheating, error power supply voltage) |
| Very fast blinking (seven blinks per second) | In process of shutting off |

1.1 CONNECTIONS

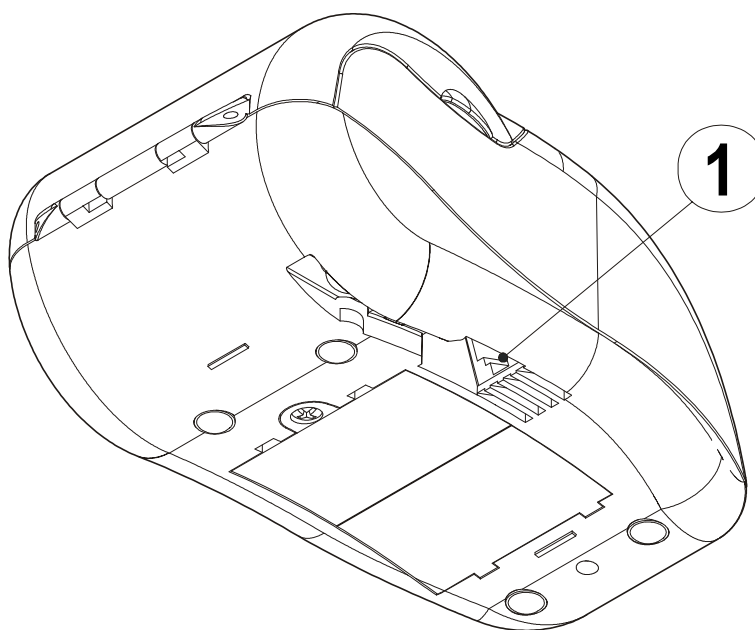


(Fig.1.1)

1.1.1 Power Supply

For the Battery Recharger/Power Supply and serial connection, the printer is equipped with a connecting cable (fig. 1.2) that comes packed with the printer and has a double connection system. On one side is a 9-pin female connector (fig. 1.2.A) for the serial port; on the other side of the same connector is a RJ11 connector (fig. 1.2.B) and a jack (fig. 1.2.C) for connection to an external adapter (fig. 1.2.D).

To supply power to the printer and for the serial connection, use the connection cable (fig. 1.2) that comes packed with the printer and following the instructions listed in the paragraph 1.1.3.

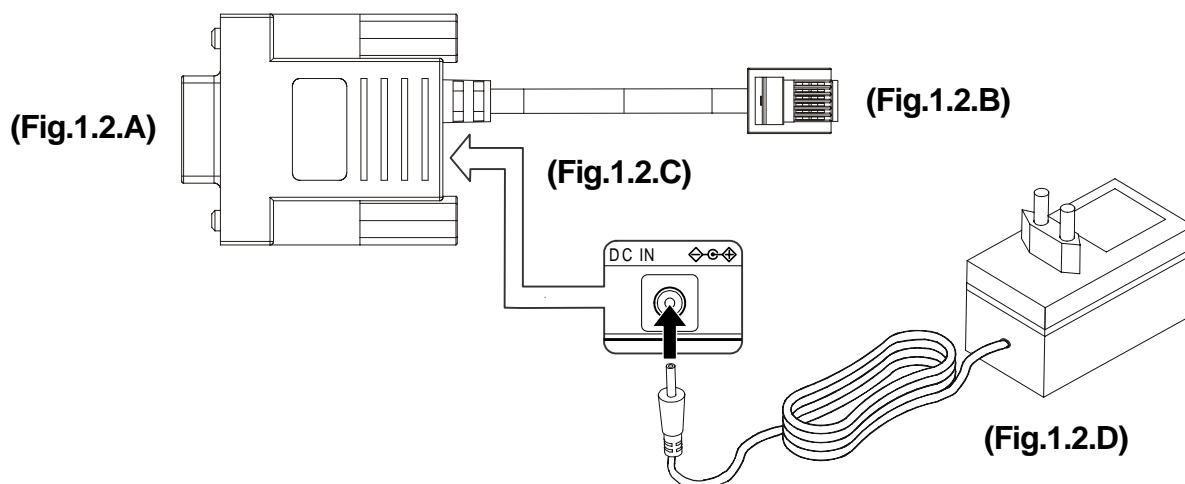

1.1.2 Turning the printer On and Off

How to turn the printer On

- Connect the power supply to the printer (see sec. 1.2)


How to turn the printer Off

- Turn off the power supply.

1.1.3 Connection with the power supply

To supply the printer use the adapter and cable packed with the printer and proceed as follows:

- connect the adapter jack to the cable jack (see fig. 1.3) and plug the adapter into the electrical mains;
- connect the cable RJ11 connector to the RJ11 connector located under the printer (see fig. 1.3).

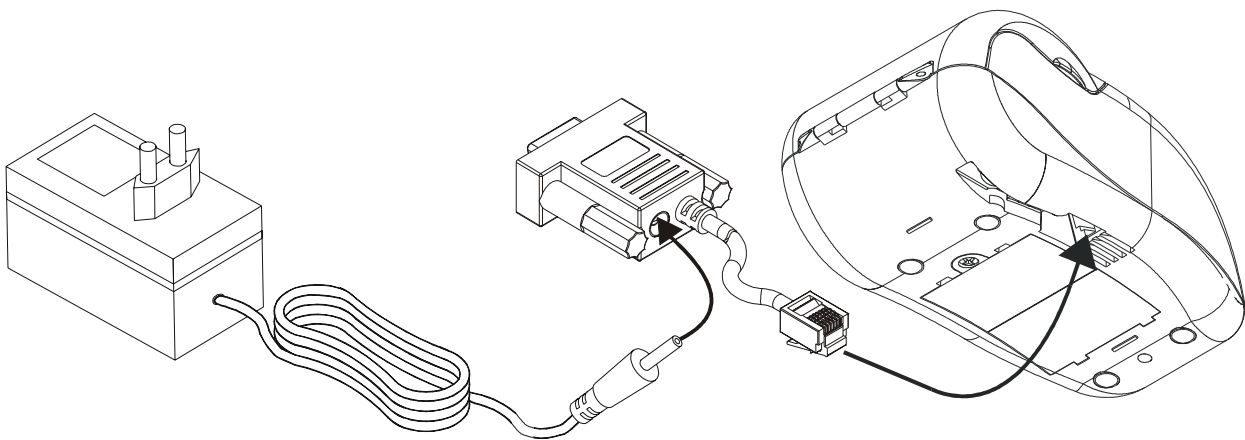

(Fig.1.3)

1.2 CONFIGURATION

The printer set up print out (see fig. 1.4) includes a range of information, and among these should be pointed out.

(Fig.1.4)

| * SETUP DEFAULT * | |
|-------------------------|---------------|
| HEAD TEMP. [°C] | = 22.5 |
| BATT TEMP. [°C] | = 25.0 |
| HEAD VOLT [V] | = 6.3 |
| Interface | :RS232 |
| Baud Rate | : 9600 bps |
| Data length | : 8 bits/chr |
| Parity | : None |
| Handshaking | : Xon/Xoff |
| Autofeed | : CR disabled |
| Consumption | : High power |
| Alignment | : Disable |
| Print Density | : 0 |
| [PUSH] ENTER SET-UP | |
| [FAST PUSH] EXIT SET-UP | |

The printer's configurable⁽¹⁾ parameters are:

- **Baud Rate:** 38400, 19200, 9600^D, 4800, 2400, 1200, 600.
- **Data length:** 7, 8^D bits/car.
- **Parity:** None^D, even or odd.
- **Handshaking:** XON/XOFF^D or Hardware.
- **Autofeed:** CR deactivated^D or CR activated.
- **Consumption:** Low power, High power^D (2).
- **Alignment:** Disable^D, Enable.
- **Print density:** -2, -1, 0^D, +1, +2.

Please note: the parameters marked with the symbol ^D represent the default values.



⁽¹⁾ **Note:** the printer interface is fixed setted to RS232.



⁽²⁾ **Note:** this parameter regulates the type of power supply setting; the default value is High power. For further details please refers to the 1.2.1 section.

Each time the key is pressed quickly, the parameter will change and the current value will be printed out. Once the desired value has been attained, hold the key down for at least a second to pass to the next parameter, and so on. Printing out of a new printer set up report indicates that set up is complete.

1.2.1 Printing optimization using the power supply

It's possible to optimize the printing, configuring in appropriate way, on the basis of printing tipology, the "Consumption" parameter, that indicate the type of power supply setting. The default value, setted during the printer setup, is High power.

With the power supply that comes packed with the printer, proceeds as follows :

- 1) if the performances in printing are not considerables, in the printer setup configure the Consumption parameter setting the value to Low power⁽³⁾.



⁽³⁾ **NOTE:** if the Consumption parameter is setted to Low power, it's advisable not to exceed the black per cent over 80 % (each dotline should have 300 dot on at most).

- 2) For dot's quantity superior to 80% ⁽⁴⁾ use a different⁽⁵⁾ power supply than the one equipped with the printer.



⁽⁴⁾ **NOTE:** the per cents reported as analytic data indicate the number of dots on in a dotline.



⁽⁵⁾ **NOTE:** to use the printer with a higher speed feed it with a power rate superior to 25W.

1.3 HEXADECIMAL DUMP

This function is used to display the characters received from the communications port; after the reception of each 10 characters from the communications port, the printer prints out both the hexadecimal code received as well as the corresponding ASCII code.


Shown below is an example of a Hexadecimal Dump:

| | | | | | | |
|----|----|----|----|----|----|---------|
| 48 | 65 | 78 | 61 | 64 | 65 | Hexade |
| 63 | 69 | 6D | 61 | 6C | 20 | cimal |
| 64 | 75 | 6D | 70 | 20 | 66 | dump f |
| 75 | 6E | 63 | 74 | 69 | 6F | unctio |
| 6E | 20 | 30 | 31 | 32 | 33 | n 0123 |
| 34 | 35 | 36 | 37 | 38 | 39 | 456789 |
| 61 | 62 | 63 | 64 | 65 | 66 | abcdef |
| 67 | 68 | 69 | 6A | 6B | 6C | ghijkl |
| 6D | 6E | 6F | 70 | 71 | 72 | mnpqrs |
| 73 | 74 | 75 | 76 | 77 | 78 | tuvwxyz |
| 79 | 7A | | | | | yz |

1.4 SIXLOAD

The printer has been designed with an **easy paper load** system to improve handling and simplify use.

This easy paper loading system is called “**sixload**” because when the paper is loaded into the printer, it looks like the number “6” (the roll on the bottom with the edge lifted).

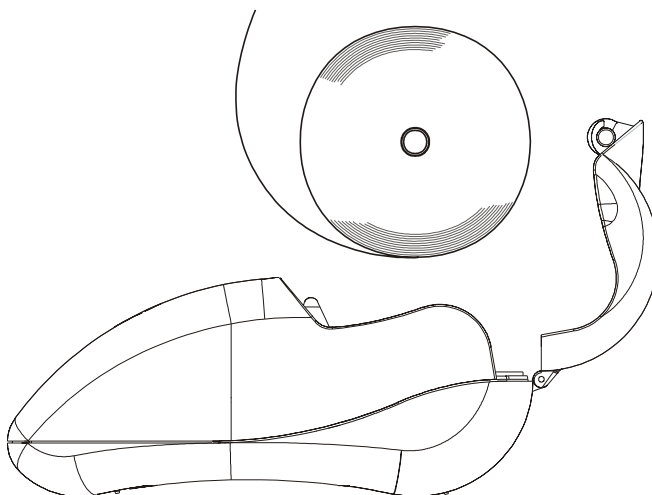


(Fig.1.5)

1.5 MAINTENANCE


1.5.1 Changing the paper roll

To change the roll of paper, proceed as follows:

- 1) Open the printer cover (see fig. 1.11) levering on the cover lateral projections and position the paper roll so that it unrolls in the direction shown in figure 1.6;

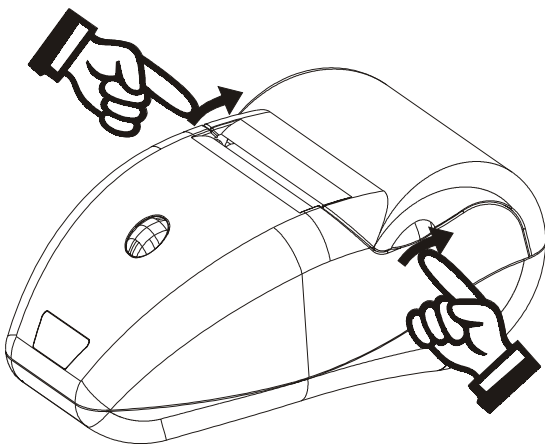


(Fig.1.6)

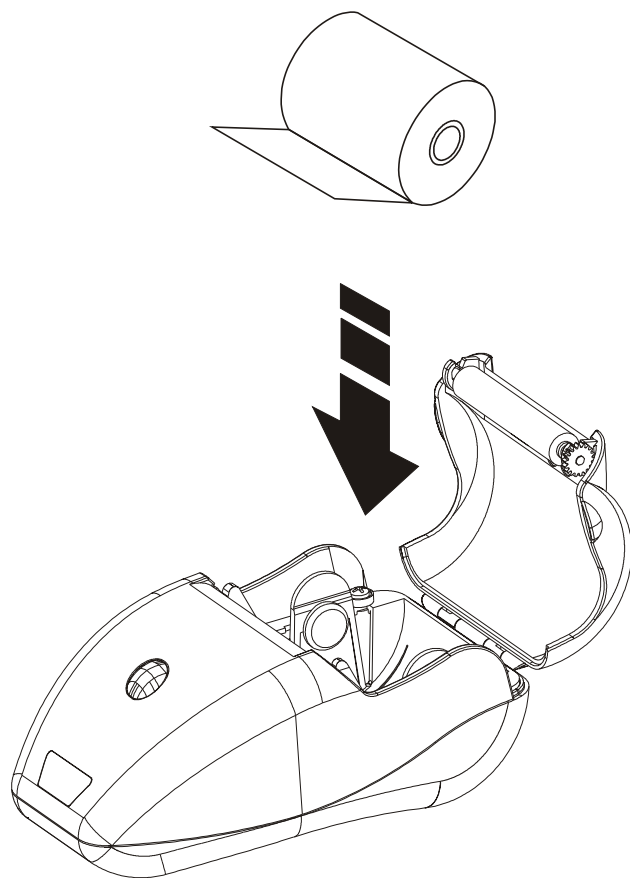

(Fig.1.7)


1. INSTALLATION AND USE

- 2) Pull up on the edge of the paper and close the cover (fig. 1.13);

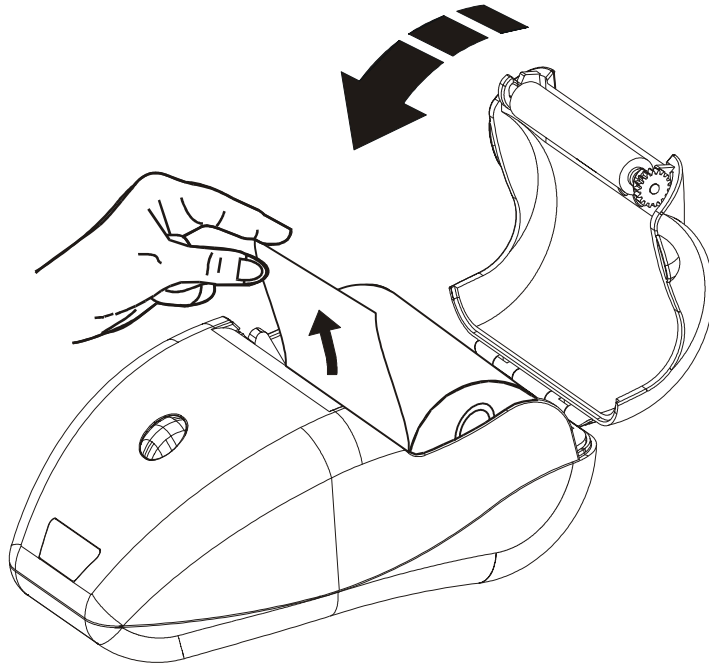

(Fig.1.8)

- 3) Tear off the paper. The printer is now ready (fig.1.14).

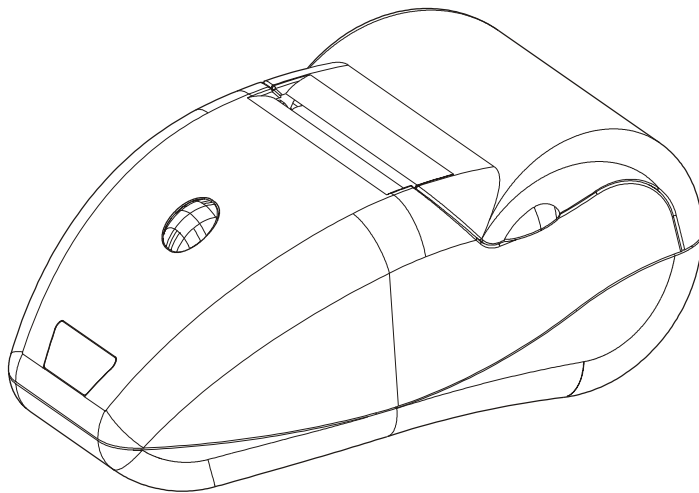

(Fig.1.9)


1.5.2 Cleaning

To clean the printer, use a vacuum cleaner or soft cloth.

Before cleaning the printer, unplug its electrical cord and make sure that the printer is off.


Do not use alcohol, solvents or hard-bristled brushes.

Do not let water or other liquids seep into the printer.

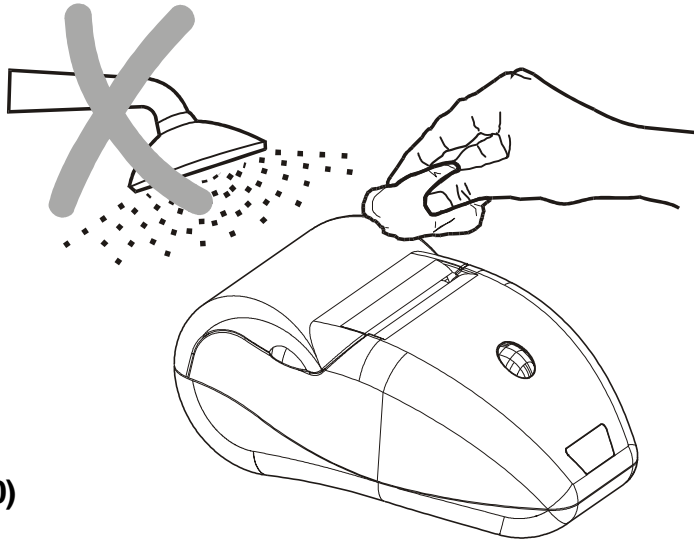

(Fig.1.10)


alcohol, solvent

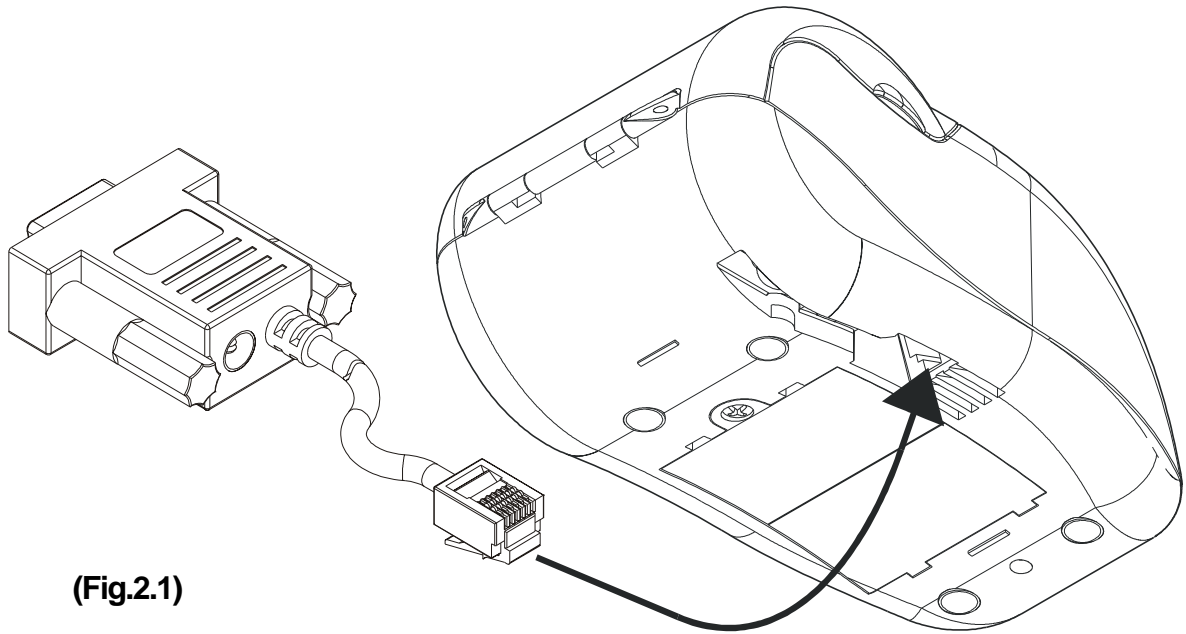

(Fig.2.1)

2.1 RS232 SERIAL

The printer is equipped with an RS232 serial interface with RJ11 connector (fig. 2.1) located underneath the printer. For serial connection, a connecting cable (fig. 2.2) with double connection system is packed with the printer. On one side is a 9-pin female connector (fig. 2.2A) to connect to the serial port; on the other side of the same connector is a RJ11 connector (fig. 2.2.B). For the layout of signals on the connectors, please refer to tables 2.1 and 2.2.

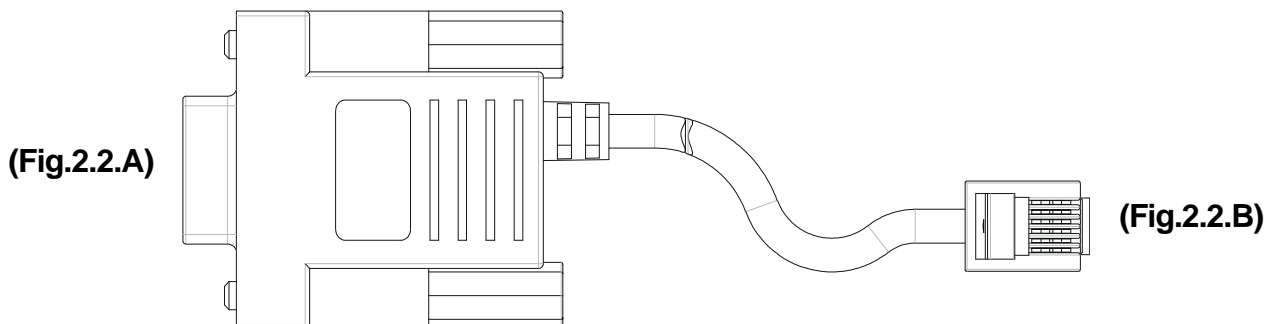

RJ11 connector DPT100 (fig. 2.1)

(Tab.2.1)

| PIN | SIGNAL | IN/OUT | A | DESCRIPTION |
|------------|---------------|---------------|----------|---------------------------------------|
| 1 | +VRIC | IN | - | External power supply voltage |
| 2 | GND | - | GND | Ground signal |
| 3 | RX | IN | TXD | Receive data |
| 4 | TX | OUT | RXD | Transmit data |
| 5 | RTS | OUT | CTS | Ready to send / Ready to receive data |
| 6 | GND | - | GND | Ground signal |

9-pin female connector (fig. 2.2.A)


(Tab.2.2)

| PIN | SIGNAL | IN/OUT | A | DESCRIPTION |
|------------|---------------|---------------|----------|---|
| 1 | DCD | OUT | DCD | Data carrier identification. Printer On (active at RS232 high) |
| 2 | TXD | OUT | RXD | Transmit data. Serial output (from host) |
| 3 | RXD | IN | TXD | Receive data. Serial data input (to host) |
| 4 | N.C. | - | N.C. | Not connected |
| 5 | GND | - | GND | Ground signal |
| 6 | DSR | OUT | DSR | Data set ready. Printer ON and operating (active at RS232 high) |
| 7 | N.C. | - | N.C. | Not connected |
| 8 | RTS | OUT | CTS | Ready to send / Ready to receive data (active at RS232 high) |
| 9 | N.C. | - | N.C. | Not connected |


2. INTERFACES

The diagrams below show a sample connection between printer and Personal Computer using a 9- and 25-pin female connector.

(Fig.2.2)

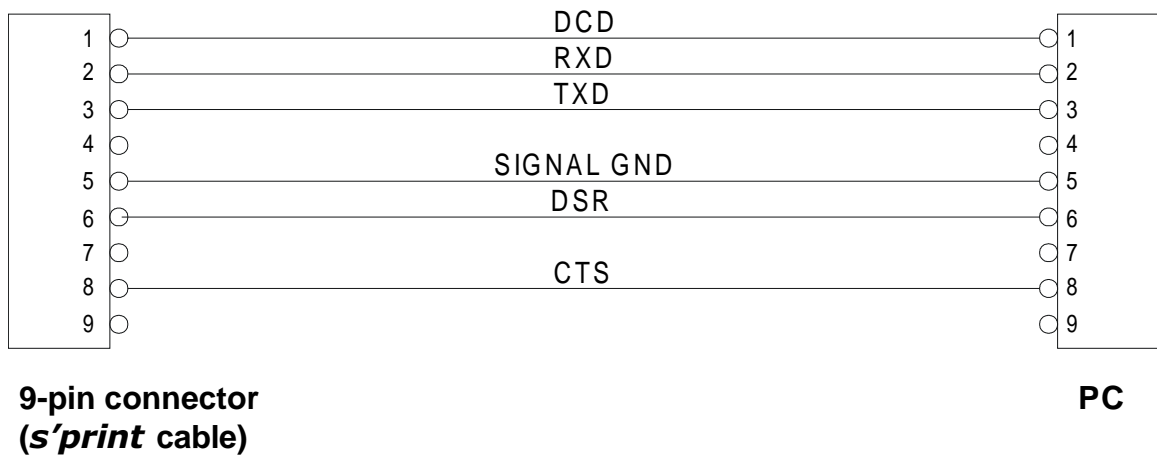

(Fig.2.3)

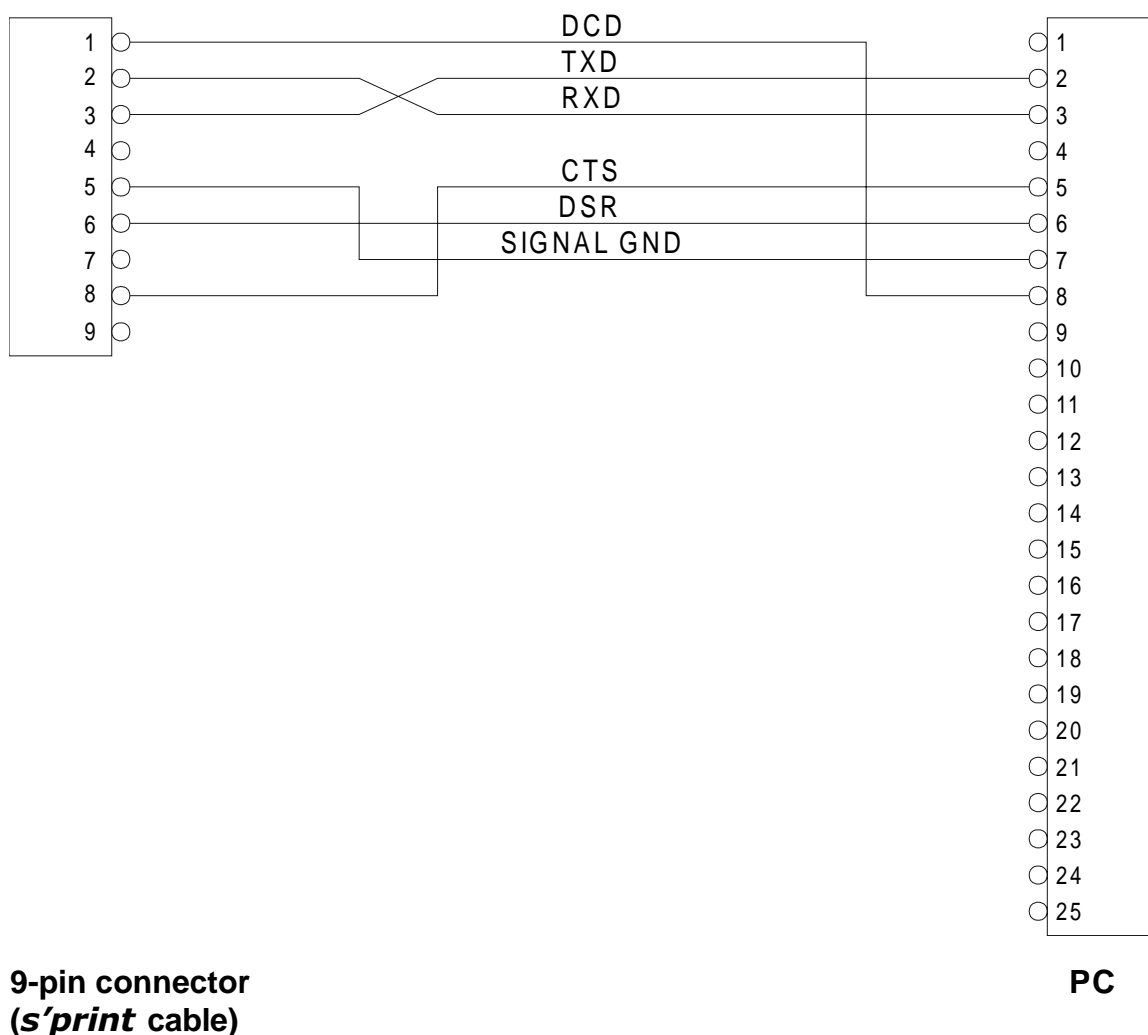

3. PRINTER FUNCTIONS

3.1 CONTROL CHARACTERS

The command table lists all the commands for the management of the printer functions. These commands can be transmitted to the printer with the serial interface. The commands can be transmitted to the printer at any moment, but they will only be carried out when the characters previously transmitted have been printed or the commands previously transmitted have been carried out. There are no commands with priority status; all the commands are carried out when the circular buffer is free to do so.

(Tab.3.1)

COMMAND TABLE

| ASCII Com. | HEX Com. | Description |
|-------------------|-----------------|-----------------------------------|
| | \$00 | Prints in small characters |
| | \$01 | Prints in double width |
| | \$02 | Prints in double height |
| | \$03 | Expanded printing |
| | \$04 | Restores small character printing |
| | \$07 | Cancel print data buffer |
| | \$0A | Forward feeds one line |
| | (n) \$0B | Forward feeds (n) line |
| | \$0D | Prints line buffer |
| | \$0F | Sets CRLF mode |
| | \$11 | Graphic mode |
| ESC # n | \$1B \$23 n | Transmit printer ID |
| ESC @ | \$1B \$40 | Resets the printer |
| ESC A | \$1B \$41 | Executes [n] dots line feed |
| (dd) ESC M | (dd) \$1B \$4D | Writes value (dd) in print mode |
| ESC N | \$1B \$4E | Sets normal mode printing |
| ESC Q | \$1B \$51 | Enables underlining |
| ESC R | \$1B \$52 | Sets reverse mode printing |
| ESC W | \$1B \$57 | Prints graphic line of 200 dpi |
| (dd) ESC a | \$1B \$61 | Selects number of dot spaces |

3. PRINTER FUNCTIONS

| ASCII Com. | HEX Com. | Description |
|----------------|---------------------|---|
| ESC c | \$1B \$63 | Management of bar code printing |
| ESC m | \$1B \$6D | Transmits print mode in serial |
| ESC q | \$1B \$71 | Disables underlining |
| ESC s | \$1B \$73 | Transmits next character in serial |
| ESC v | \$1B \$76 | Transmits a printer status |
| ESC · n1 n2 | \$1B \$FA n1 n2 | Print graphic |
| GS \$ n | \$1D \$24 n | Set absolute shift into a graphic line |
| GS I n | \$1D \$49 n | Transmits the printer ID |
| GS U | \$1D \$55 | Resets printer parameters to default value |
| GS W n | \$1D \$57 n | Prints n byte of a 200 dpi graphic line |
| GS ÷ (nH) (nL) | \$1D \$F6 (nH) (nL) | Aligns the ticket at the first printed line |

The following pages provide a more detailed description of each command.

00H

| | |
|---------------|---|
| [Name] | Small character printing |
| [Format] | ASCII - Hex 00 Decimal 0 |
| [Description] | The printer prints in small characters (normal) |
| [Notes] | <ul style="list-style-type: none"> • The commands 00H - 09H do not cancel the print buffer • The commands which modify the direction of the characters are only active at the beginning of the line |
| [Default] | Setting in option register by means of front keys |
| [Reference] | 01H, 02H, 03H, 04H |
| [Example] | |

01H

| | |
|---------------|---|
| [Name] | Double width printing |
| [Format] | ASCII - Hex 01 Decimal 1 |
| [Description] | The printer prints in double width format |

3. PRINTER FUNCTIONS

| | |
|-------------|--|
| [Notes] | <ul style="list-style-type: none">• The commands 00H - 09H do not cancel the print buffer• The commands which modify the direction of the characters are only active at the beginning of the line |
| [Default] | Setting in option register by means of front keys |
| [Reference] | 00H, 02H, 03H, 04H |
| [Example] | |

02H

| | |
|---------------|--|
| [Name] | Double height printing |
| [Format] | ASCII - Hex 02 Decimal 2 |
| [Description] | The printer prints in double height format |
| [Notes] | <ul style="list-style-type: none">• The commands 00H - 09H do not cancel the print buffer• The commands which modify the direction of the characters are only active at the beginning of the line |
| [Default] | Setting in option register by means of front keys |
| [Reference] | 00H, 01H, 03H, 04H |
| [Example] | |

03H

| | |
|---------------|---|
| [Name] | Expanded printing |
| [Format] | ASCII - Hex 03 Decimal 3 |
| [Description] | The printer prints in expanded character mode |
| [Notes] | <ul style="list-style-type: none">• commands 00H-09H do not cancel the print buffer• the commands which modify the dimensions of the characters are only active at the beginning of the line |
| [Default] | Setting in the option register by means of the front keys |
| [Reference] | 00H, 01H, 02H, 04H |
| [Example] | |

04H

| | |
|---------------|--|
| [Name] | Restore small character printing |
| [Format] | ASCII - Hex 04 Decimal 4 |
| [Description] | The printer resumes printing with small characters |
| [Notes] | <ul style="list-style-type: none"> • The commands 00H-09H do not cancel the print buffer • the commands which modify the dimensions of the characters are only active at the beginning of the line |
| [Default] | Setting in the option register by means of the front keys |
| [Reference] | 00H, 01H, 02H, 03H |
| [Example] | |

07H

| | |
|---------------|---|
| [Name] | Cancel print data buffer |
| [Format] | ASCII - Hex 07 Decimal 7 |
| [Description] | Deletes all the print data in the current print buffer. |
| [Notes] | <ul style="list-style-type: none"> • If data that existed in the previously specified printing area also exists in the currently specified printing area, it is deleted. |
| [Default] | |
| [Reference] | |
| [Example] | |

0AH

| | |
|---------------|--|
| [Name] | Forward feeds one line |
| [Format] | ASCII - Hex 0A Decimal 10 |
| [Description] | Forward feeds one line equivalent to a line of print |
| [Notes] | <ul style="list-style-type: none"> • This command brings about the printing of the contents of the line buffer. |
| [Default] | |

3. PRINTER FUNCTIONS

[Reference] **0BH**

[Example]

(n) 0BH

[Name] **Forward feeds (n) lines**

[Format] ASCII -
 Hex 0B
 Decimal 11

[Description] Carries out the number of line feeds specified in (n)

[Notes] • The number must be ASCII and between 0 and 9 (when
 n=0 the command is ignored)
 • This command clears the line buffer

[Default]

[Reference] **0AH**

[Example] To forward feed fast, 5 lines at a time:
 \$35 \$0B (or 5 and the command \$0B)

0DH

[Name] **Print the line buffer**

[Format] ASCII -
 Hex 0D
 Decimal 13

[Description] This command prints the line buffer

[Notes] • If the line buffer is empty, the command is ignored
 • If the CRLF option is set, this command is ignored and
 printing can only be ordered through the command \$0A

[Default]

[Reference] **0FH**

[Example]

0FH

| | |
|---------------|---|
| [Name] | Set CRLF mode |
| [Format] | ASCII - Hex 0F Decimal 15 |
| [Description] | Inhibits the command \$0D maintaining enabled only the command \$0A for printing |
| [Notes] | <ul style="list-style-type: none"> • To disable this option, reset the printer • This command clears the line buffer • On switching on the default value is in the Option Register |
| [Default] | Setting in the option register by means of the front keys |
| [Reference] | 0DH |
| [Example] | |

11H

| | |
|---------------|--|
| [Name] | Graphic mode |
| [Format] | ASCII - Hex 11 Decimal 17 |
| [Description] | Enables graphic mode: a line in 24 column mode corresponds to 144 horizontal dots divided into 24 blocks of 6 dots each; a line in 40 column mode corresponds to 240 horizontal dots divided into 40 blocks of 6 dots each. |
| [Notes] | To obtain graphic printing, enter the command \$11 at the beginning of each line. The format of the byte in graphic configuration is: X R P6 P5 P4 P3 P2 P1 D7 D6 D5 D4 D3 D2 D1 D0 where: X is not used (0 is recommended); R must be fixed at level 1; P1, P6 are the graphic dot data (1 prints, 0 does not print). The P6 bit of the string of dots transmitted is printed on the left and the others follow from left to right (P5, P4, P3, P2, |

3. PRINTER FUNCTIONS

P1) as shown:

1st byte →

2nd byte →

3rd byte →

P6 P5 P4 P3 P2 P1

P6 P5 P4 P3 P2 P1

P6 P5 P4 P3 P2 P1

[Default]

[Reference]

[Example]

To print a line of dots, transmit:

\$11, n x \$7F (where n is the number of characters per line),
\$0D.

To print an empty line, transmit:

\$11, \$40, \$0D.

ESC # n

[Name] **Transmit printer ID**

[Format] ASCII ESC # n
 Hex 1B 23 n
 Decimal 27 73 n

[Range] $1 \leq n \leq 3, 49 \leq n \leq 51$

[Description] Transmits the printer ID specified by *n* follows:

| | ID stampante | Specifica |
|-------|--------------------------------|------------------------------------|
| 1, 49 | Identificazione mod. stampante | 53H (24 col) |
| | | 55H (40 col) |
| 2, 50 | Non utilizzato | Fisso su 00H |
| 3, 51 | Identificazione versione ROM | Dipende dalla versione ROM (4 car) |

[Notes] • This command is executed when the data is processed in the data buffer. Therefore, there could be a time lag between command reception and data transmission, depending on data buffer status.

[Default]

[Reference]

[Example]

ESC @

| | | | |
|---------------|--|-----|----|
| [Name] | Resets the printer | | |
| [Format] | ASCII | ESC | @ |
| | Hex | 1B | 40 |
| | Decimal | 27 | 64 |
| [Description] | Cancels all the data in the print buffer and resets the printer mode, restoring the mode which was enabled at the moment of switching on | | |
| [Notes] | <ul style="list-style-type: none"> • Same as hardware reset • After the command has been transmitted, 1.5 seconds elapse before the printer is enabled | | |
| [Default] | | | |
| [Reference] | | | |
| [Example] | This can be useful during switching on in order to avoid the sending of false characters during initialization by the master device | | |

ESC A [nH] [nL]

| | | | | |
|---------------|------------------------------------|-------|----|----|
| [Name] | Executes [n] dots line feed | | | |
| [Format] | ASCII | ESC A | nH | nL |
| | Hex | 1B 41 | nH | nL |
| | Decimal | 27 65 | nH | nL |
| [Description] | Executes [n] dots line feed. | | | |
| [Notes] | | | | |
| [Default] | | | | |
| [Reference] | | | | |
| [Example] | | | | |

(dd) ESC M

| | | | | | |
|---------------|---|----|----|-----|----|
| [Name] | Writes the value (dd) in the print mode | | | | |
| [Format] | ASCII | dH | dL | ESC | M |
| | Hex | dH | dL | 1B | 4D |
| | Decimal | dH | dL | 27 | 77 |
| [Description] | Sets the print mode default parameters: \$00 small character printing | | | | |

3. PRINTER FUNCTIONS

| | |
|-------------|--|
| | \$01 double width printing |
| | \$02 double height printing |
| | \$03 expanded printing |
| [Notes] | • The setting is stored in the EEPROM |
| [Default] | Setting by means of the front keys |
| [Reference] | ESC m |
| [Example] | For double height printing, transmit: \$30 \$32 \$1B \$4D |

ESC N

| | | | |
|---------------|---|-----|----|
| [Name] | Set normal mode printing | | |
| [Format] | ASCII | ESC | N |
| | Hex | 1B | 4E |
| | Decimal | 27 | 78 |
| [Description] | Select normal mode printing:the receipt feeds out of the printer with the printing upside down running from right to left | | |
| [Notes] | | | |
| [Default] | Setting in option register by means of front keys | | |
| [Reference] | ESC R | | |
| [Example] | | | |

ESC Q

| | | | |
|---------------|---|-----|----|
| [Name] | Enable underlined printing | | |
| [Format] | ASCII | ESC | Q |
| | Hex | 1B | 51 |
| | Decimal | 27 | 81 |
| [Description] | After this command has been received, the characters are printed underlined | | |
| [Note] | | | |
| [Default] | | | |
| [Reference] | ESC q | | |
| [Example] | | | |

ESC R

| | | | |
|---------------|---|-----|----|
| [Name] | Set reverse mode printing | | |
| [Format] | ASCII | ESC | R |
| | Hex | 1B | 52 |
| | Decimal | 27 | 82 |
| [Description] | Selects printing in reverse mode: the receipt feeds out of the printer with the printing in normal mode running from left to right. | | |
| [Notes] | | | |
| [Default] | Setting in option register by means of front keys | | |
| [Reference] | ESC N | | |
| [Example] | | | |

ESC W

| | | | |
|---------------|--|-----|----|
| [Name] | Prints a graphic line at 200 dpi | | |
| [Format] | ASCII | ESC | W |
| | Hex | 1B | 57 |
| | Decimal | 27 | 87 |
| [Description] | After receiving this command, the printer waits for 48 bytes which correspond to an entire graphic line. In fact, 48 bytes of 8 bits each correspond to 384 dots per line. | | |
| [Notes] | | | |
| [Default] | | | |
| [Reference] | | | |
| [Example] | | | |

(dd) ESC a

| | | | | |
|---------------|--|------|-----|----|
| [Name] | Selects the number of dot spaces | | | |
| [Format] | ASCII | (dd) | ESC | a |
| | Hex | (dd) | 1B | 61 |
| | Decimal | (dd) | 27 | 97 |
| [Description] | (dd) are two ASCII characters which identify a hexadecimal byte and correspond to the number of dot lines between one print line and another | | | |
| [Notes] | | | | |

3. PRINTER FUNCTIONS

[Default] 0
[Reference]
[Example]

ESC c

[Name] **Management of bar code printing**

[Format] ASCII ESC c [code] [height] [position] [options]
[length] [data]

Hex 1B 63

Decimal 27 99

[Description] This command executes the bar code printing according to followings parameters :

[code] Specify the type of bar code using an ASCII character. The possible values are :

| | |
|---|-----------------|
| I | Interleaved 2/5 |
| C | Code 39 |
| B | CodaBar |
| e | EAN8 |
| E | EAN13 |

[height] Specify the bar code height using a byte expressed as a number of dot lines in 1/8 mm units.

[position] Specify the printing start position as left hand margin through a byte expressed in 1/8 mm units.

[options] Specify the bar code options through a byte. In the following tables are listed all the possible values of single bit inside of byte :

| Bit 0 | Function | Description |
|-------|----------------------------|-------------|
| 0 | Check digit is not printed | Check digit |
| 1 | Check digit is printed | |

3. PRINTER FUNCTIONS

| Bit 1 | Function | Description |
|-------|----------|-------------|
| - | Not used | - |

| Bit 3 | Bit 2 | Function | Description |
|-------|-------|---------------|--------------|
| 0 | 0 | No | HRI position |
| 0 | 1 | Above | |
| 1 | 0 | Below | |
| 1 | 1 | Above & below | |

| Bit 5 | Bit 4 | Function | Description |
|-------|-------|----------|---------------|
| 0 | 0 | Normal | Barcode width |
| 0 | 1 | Double | |
| 1 | 0 | Triple | |
| 1 | 1 | Not used | |

| Bit | Function | Description |
|-----|----------|-------------|
| 6 | Not used | - |
| 7 | Not used | - |

[length] Specify the characters number to print trough a byte; in following are listed the maximum lengths allowed :

Interleaved 2/5 = 12 characters

Code 39 = 10 characters

CodaBar = 10 characters

EAN8 = 8 characters

EAN13 = 13 characters

[data] Specify the characters to print expressed in ASCII

[Notes]

[Default]

[Reference]

[Example] In the following example is indicated the command sequence

3. PRINTER FUNCTIONS

to print a barcode :

\$1B, 'N', \$1B, 'c', 'C', \$50, \$3C, \$14, \$06, 'SPRINT'



where :

\$1B, 'N' (sets the printing in normal mode)
\$1B, 'c', (bar code printing command)
'C', (barcode type = Code 39)
\$50, (barcode height = 10 mm)
\$3C, (starting position = 7,5 mm)
\$14, (HRI printing below, barcode width double)
\$06, (characters number to print)
'SPRINT' (characters to print)

ESC m

| | | | |
|---------------|--|-----|-----|
| [Name] | Transmits the print mode in serial | | |
| [Format] | ASCII | ESC | m |
| | Hex | 1B | 6D |
| | Decimal | 27 | 109 |
| [Description] | Transmits the print mode configuration on the serial port | | |
| [Notes] | • If the printer is using the parallel protocol, nothing will be transmitted | | |
| [Default] | Setting in the option register by means of the front keys | | |
| [Reference] | ESC B | | |
| [Example] | The response is on two bytes. E.g. if you receive: | | |
| | \$30, \$32 | | |
| | it means that printing is in double height mode | | |

ESC q[Name] **Disables underlined printing**

[Format] ASCII ESC q
 Hex 1B 71
 Decimal 27 113

[Description] Annuls underlined printing

[Notes]

[Default]

[Reference] **ESC Q**

[Example]

ESC s[Name] **Transmits the next character in serial**

[Format] ASCII ESC s
 Hex 1B 73
 Decimal 27 115

[Description] Transmits the next character it receives on the serial port

[Notes]

[Default]

[Reference]

[Example] If you transmit: ESC s A
 the last character, A, will not be printed but immediately trans-
 mitted on the serial line

ESC · n1 n2[Name] **Print graphic bank (384 ´ 85 dots).**

[Format] ASCII ESC · n1 n2
 Hex 1B FA n1 n2
 Decimal 27 250 n1 n2

[Range] 0 £ n1, n2 £ 255

[Description] Prints the graphics bank from flash.
 n1 specifies the starting dot line (1 ÷ 85).
 n2 specifies the number of lines to print.

[Notes] • If n1 + n2 > 85 the printer only prints 85 - n1 + 1 dotlines.

[Default]

3. PRINTER FUNCTIONS

[Reference]

[Example] To print the graphic bank from dotline 10 to dotline 40, send:
1BH FAH 0AH 1EH

ESC v

[Name] **Transmit paper sensor status**

[Format] ASCII ESC v
Hex 1B 76
Decimal 27 118

[Description] When this command is received, transmit the current status of the paper sensor.

[Notes] • This command is executed immediately, even when the data buffer is full (Busy).
The status to be transmitted is shown in the table below:

| Bit | Off/On | Hex | Decimal | Function |
|-----|--------|-----|---------|--|
| 0,1 | Off | 00 | 0 | Cover close, paper present |
| | On | 03 | 3 | Cover open or paper sensor not working |
| 2,3 | Off | 00 | 0 | Paper-end sensor: Paper present |
| | On | 0C | 12 | Paper-end sensor: Paper not present |
| 4 | Off | 00 | 0 | Not used. Fixed to Off. |
| 5 | Off | 00 | 0 | Head temperature correct |
| | On | 20 | 32 | Head temperature error |
| 6 | Off | 00 | 0 | Battery voltage correct |
| | On | 40 | 64 | Battery voltage error |
| 7 | Off | 00 | 0 | Not used. Fixed to Off. |

[Default]

[Reference]

[Example]

GS \$ n

[Name] **Set absolute shift into a graphic line.**

[Format] ASCII GS \$ n

Hex 1D 24 n

Decimal 29 36 n

[Range] $0 \leq n \leq 47$

[Description] Set the print beginning position into a graphic line based on the current value of n that indicate the byte number of shift from left margin.

[Notes] • Settings outside the specified printable area are ignored.

[Default]

[Reference]

[Example]

GS I n

[Name] **Transmit printer ID.**

[Format] ASCII GS I n

Hex 1D 49 n

Decimal 29 73 n

[Range] $1 \leq n \leq 3, 49 \leq n \leq 51$

[Description] Transmits the printer ID specified by n follows:

| | ID stampante | Specifica |
|-------|--------------------------------|------------------------------------|
| 1, 49 | Identificazione mod. stampante | 53H (24 col) |
| | | 55H (40 col) |
| 2, 50 | Non utilizzato | Fisso su 00H |
| 3, 51 | Identificazione versione ROM | Dipende dalla versione ROM (4 car) |

[Notes] • This command is executed when the data is processed in the data buffer. Therefore, there could be a time lag between command reception and data transmission, depending on data buffer status.

[Default]

[Reference]

[Example]

3. PRINTER FUNCTIONS

GS U

| | | | |
|---------------|---|----|----|
| [Name] | Resets the printer parameters to default. | | |
| [Format] | ASCII | GS | U |
| | Hex | 1D | 55 |
| | Decimal | 29 | 85 |
| [Description] | Resets the printer parameters to the default configuration. | | |
| [Notes] | • After executing this command the printer is initialized. | | |
| [Default] | | | |
| [Reference] | | | |
| [Example] | | | |

GS W n d1 ...dn

| | | | | | |
|---------------|--|----|----|---|----------|
| [Name] | Prints n byte of a 200 dpi graphic line | | | | |
| [Format] | ASCII | GS | W | n | d1... dn |
| | Hex | 1D | 57 | n | d1... dn |
| | Decimal | 29 | 87 | n | d1... dn |
| [Range] | $1 \leq n \leq 48$ | | | | |
| | $0 \leq d1 \dots dn \leq 255$ | | | | |
| [Description] | Print n byte of a 200 dpi graphic line where : | | | | |
| [Notes] | • n specifies the number of byte to print; | | | | |
| | • d1...dn specify the bytes to print. | | | | |
| | • If the bit image data input exceeds the number of dots to be printed on a line, the excess data are processed as printable characters. | | | | |
| | • d indicates the bit image data. Set a corresponding bit to 1 to print a dot, or to 0 to not print the dot. | | | | |
| | • This command is not affected by the emphasized, double-strike, underline (etc.) print modes, except for the upside-down mode. | | | | |
| [Default] | | | | | |
| [Reference] | | | | | |
| [Example] | For printing 12 bytes the command sequence is : 1D 57 0C FF 00 FF 00 FF 00 FF 00 FF 00 FF 00 | | | | |

GS ÷ (nH) (nL)

| | | | |
|---------------|---|---------------------|----------|
| [Name] | Aligns the ticket at the first printed line | | |
| [Format] | ASCII | GS ÷ | (nH)(nL) |
| | Hex | 1D F6 | (nH)(nL) |
| | Decimal | 29 246 | (nH)(nL) |
| [Description] | This command searches for the reference notch on the paper and aligns the ticket at the first line to be printed. | | |
| [Note] | nH and nL are the values of the shift to be made once the notch has been found | | |
| | The command is only performed if alignment is enabled under setup (see parameter) | | |
| [Reference] | | | |
| [Example] | To print a logo on a ticket that is 25 mm long with the hole (or notch) at the end of the ticket, the following command must be sent: | | |
| | 0x1D, 0xF6, 0xFF, 0x7B | (perform alignment) | |
| | 0x1B, 0xFA, 0x00, 0x55 | (print logo) | |

In this example, nH and nL are expressed in module 2 so that the motor will recede.

4. TECHNICAL SPECIFICATIONS

4.1 TECHNICAL SPECIFICATIONS

Table 4.1 gives the main technical specifications of the printer.

(Tab.4.1)

| | |
|---|--|
| Resolution | 203 DPI (8 dot/mm) |
| Paper roll size | 57.5 mm ± 1 mm |
| Sensors | Paper out |
| Print method | Thermal (8 dot/mm) |
| Print mode | Forward , reverse, 90° |
| Print styles | Normal, double height/width, reverse, underlines, expanded |
| Character fonts | 1 (16 x 24 dot) |
| Communication interfaces available | RS232 |
| Driver for Windows | 95 / 98 / NT / W2K |
| Baud rate | 600 to 38400 bps |
| Print buffer | 128 bytes |
| Flash memory | 32K |
| Graphics memory | 1 logo of 384 x 85 dots |
| Print speed | up to 50 mm/sec ⁽²⁾ |
| Power supply | 9-50 VDC / 11VA (External power supply) |
| Electrical input | |
| Print ⁽¹⁾ | 500 mA |
| Environmental conditions | |
| Operating temperature | 0 °C ÷ 50 °C |
| Relative humidity | 10-85 %Rh without condensing |
| Storage temperature / humidity | -20 °C ÷ +70 °C / 10 %Rh ÷ 90 %Rh |
| Dimensions | 145.96mm x 88.18mm x 64.61mm |
| Weight | 340 gr. (without paper roll) |

Note : ⁽¹⁾ STANDARD CUSTOM receipt and 1300 mAh battery.

⁽²⁾ It depends by the battery status, the printing typology and the environment temperature.

(Tab.4.2)

| ESC/POS™ EMULATION | |
|------------------------------|-----------------------|
| 57 mm paper | 12.7 cpi |
| Number of columns | 24, 40 ⁽³⁾ |
| Characters (L x H mm) | |
| Normal | 2 x 3 |
| Double height | 2 x 6 |
| Double width | 4 x 3 |
| Double height and width | 4 x 6 |

⁽³⁾**NOTE**

The 40 column version is downloadable on the Support/Download/Firmware section from www.custom.it web site.

4. TECHNICAL SPECIFICATIONS

4.2 ADAPTOR SPECIFICATIONS

220Vac Adaptor

(Tab.4.3)

| Input specifications | |
|----------------------|---------|
| Input voltage | 230 Vac |
| Input frequency | 50 Hz |

| Output specifications | |
|-----------------------|--------|
| Output voltage | 18 Vdc |

120Vac Adaptor

(Tab.4.4)


| Input specifications | |
|----------------------|---------|
| Input voltage | 230 Vac |
| Input frequency | 50 Hz |

| Output specifications | |
|-----------------------|--------|
| Output voltage | 18 Vdc |

4.3 DIMENSIONS

Printer dimensions are shown below.

(Fig.4.1)

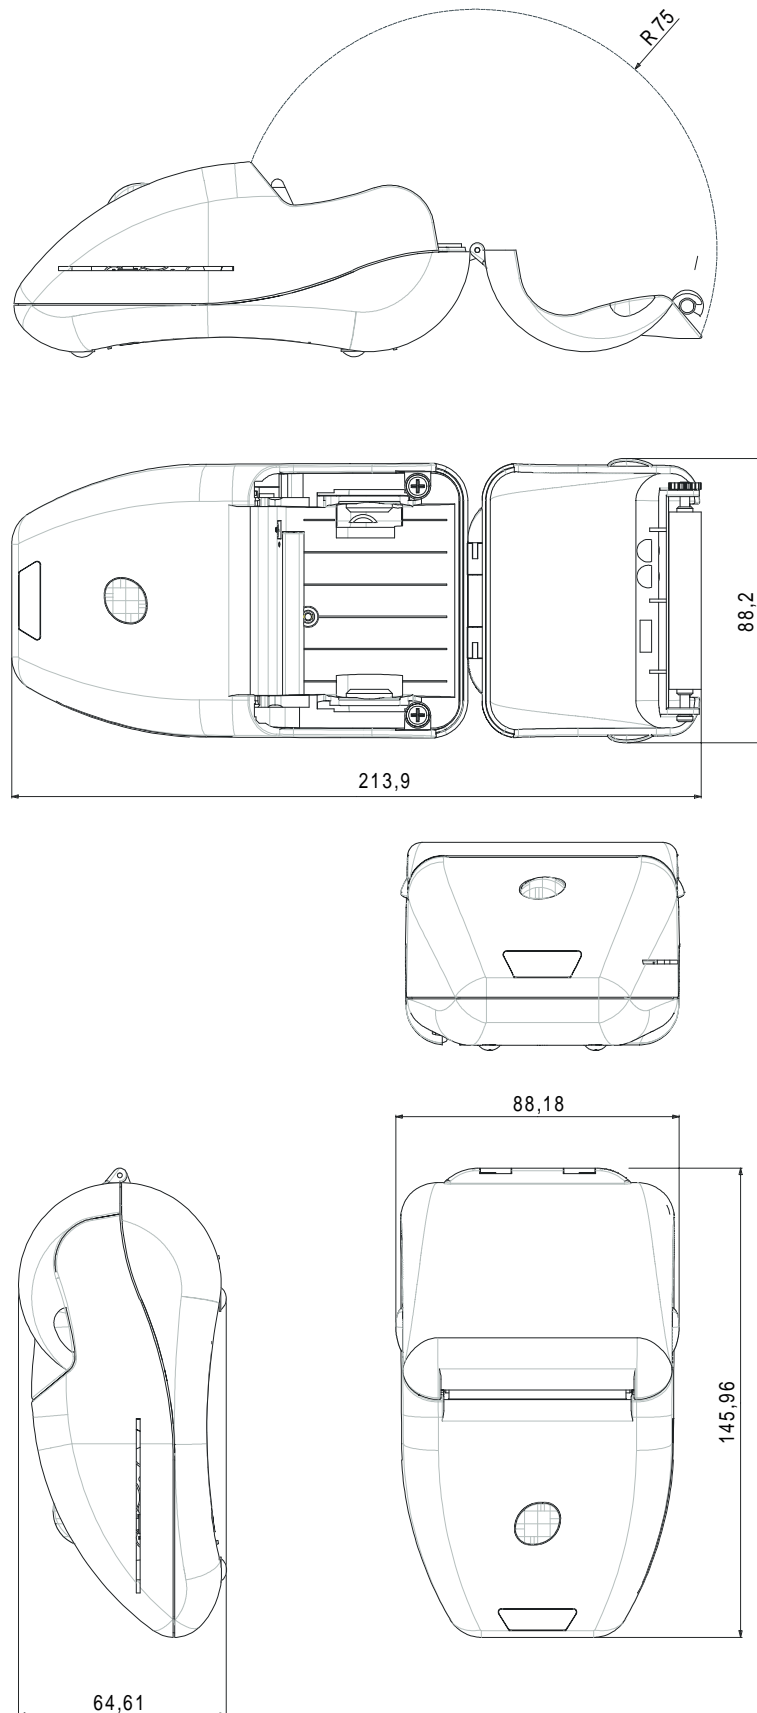

5. CHARACTER SETS

5.1 CHARACTER SETS

The printer has a 224-character font, a print-out of which is shown below.

| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | A | B | C | D | E | F |
|---|----|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 0 | 0 | @ | P | Φ | p | Ç | É | ä | | Ł | † | α | ≡ | | |
| 1 | ! | 1 | A | Q | a | q | Ü | æ | i | | Ł | † | β | ± | |
| 2 | " | 2 | B | R | b | r | ë | Æ | ó | | Ł | † | γ | ≥ | |
| 3 | # | 3 | C | S | c | s | ä | ö | ü | | Ł | † | π | ≤ | |
| 4 | \$ | 4 | D | T | d | t | ä | ö | ñ | | Ł | † | Σ | ∫ | |
| 5 | % | 5 | E | U | e | u | ä | ö | Ñ | | Ł | † | ∅ | ∫ | |
| 6 | & | 6 | F | V | f | v | ä | ö | ñ | | Ł | † | μ | ÷ | |
| 7 | ç | ' | 7 | G | W | g | w | ç | ü | ñ | | Ł | † | ≈ | |
| 8 | ç | (| 8 | H | X | h | x | ë | ü | ç | | Ł | † | ° | |
| 9 | ç |) | 9 | I | Y | i | y | ë | ö | ç | | Ł | † | θ | |
| A | ç | * | : | J | Z | j | z | ë | ü | ç | | Ł | † | λ | |
| B | ç | + | ; | K | [| k | ° | ï | ç | ¼ | | Ł | † | δ | |
| C | ç | , | < | L | \ | l | ± | î | f | ¼ | | Ł | † | ∞ | |
| D | ç | - | = | M |] | m | μ | ï | ç | ¼ | | Ł | † | ∅ | |
| E | ç | . | > | N | ^ | n | ñ | ä | ö | ç | | Ł | † | € | |
| F | ç | / | ? | O | _ | o | ≠ | ä | ö | ç | | Ł | † | ∫ | |

(Fig.5.1)

A.1 TICKET ALIGNMENT


A.1.1 Ticket alignment

Paper stock with alignment marks is permitted so that tickets of a fixed length or with pre-printed areas may be utilized. To guarantee proper alignment, the "Alignment" parameter must be enabled under setup using the key (see: setting configuration parameters)

The notch mark must be placed on the termic side of the ticket itself (printable area) .

The label dimension is:

(Fig.A.1)

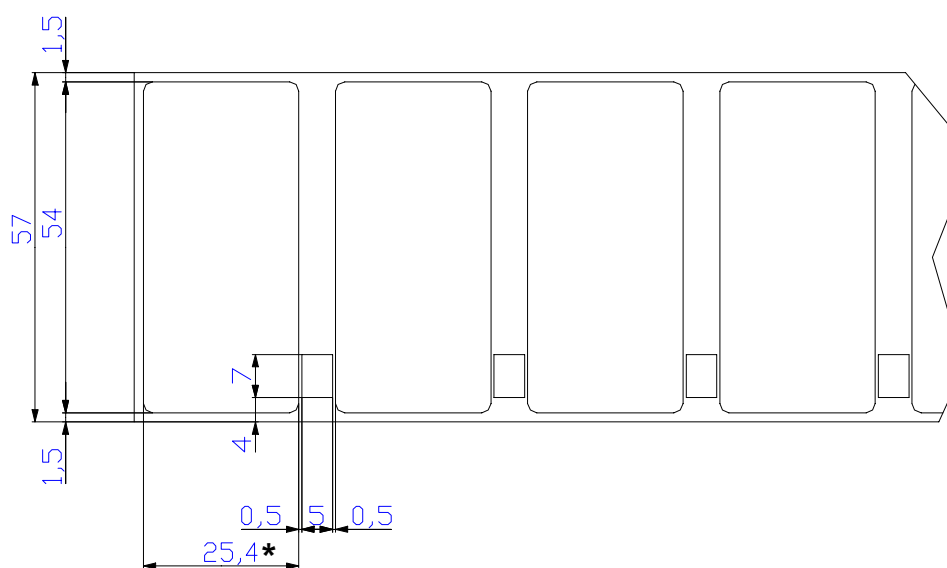

* The listed value showed with on asterisk in the fig.A1 indicates the minum dimension controlled

A.1.2 Alignment Description

The GS F6 command searches for the reference notch on the paper and muve the label with the value of nH e nL parameters
o move in the exact point for printing on the label just give the right values to parameters nH and nL.

Example: To print a logo on a ticket like in to fig.A1 with the hole (or notch) at the end of the ticket, the following command must be sent:

| | |
|------------------------|---------------------|
| 0x1D, 0xF6, 0xFF, 0x7B | (perform alignment) |
| 0x1B, 0xFA, 0x00, 0x55 | (print logo) |

In this example, nH and nL are expressed in module 2 so that the motor will recede.

The nH e nL parameter are calculated in the following mode:

1) Find the shift to effect, after the alignment from:

$$\begin{aligned}\text{Distance} &= \text{Label dimension} - \text{Distance from sensor end printing line} \\ &= 25.4 \text{ (mm)} - 8.7 \text{ (mm)} = 16.7 \text{ mm}\end{aligned}$$

$$2) \text{ Distance in dot (express at 200 dpi)} = 16.7 \text{ (mm)} * 8 \text{ (dot/mm)} = 133 \text{ dot}$$

3) The shift is negative because the motor must be moved backwards and then should be express number in complement 2 whose corresponds to FF 7B.



NOTE: Among printers could be a difference among alignment, these difference is dued from the sensibility of the alignment notch.

A.2 SPARE PARTS

(Tab.A.2)

| | |
|----------------------|------------------------------|
| RCT57X50 | Roll of thermal paper |
| PCALI-DP-E | Adapter |
| CB9POLI-PLUG8 | Serial cable |